
1853 – FOUNDER'S EDITION
CARE INSTRUCTIONS

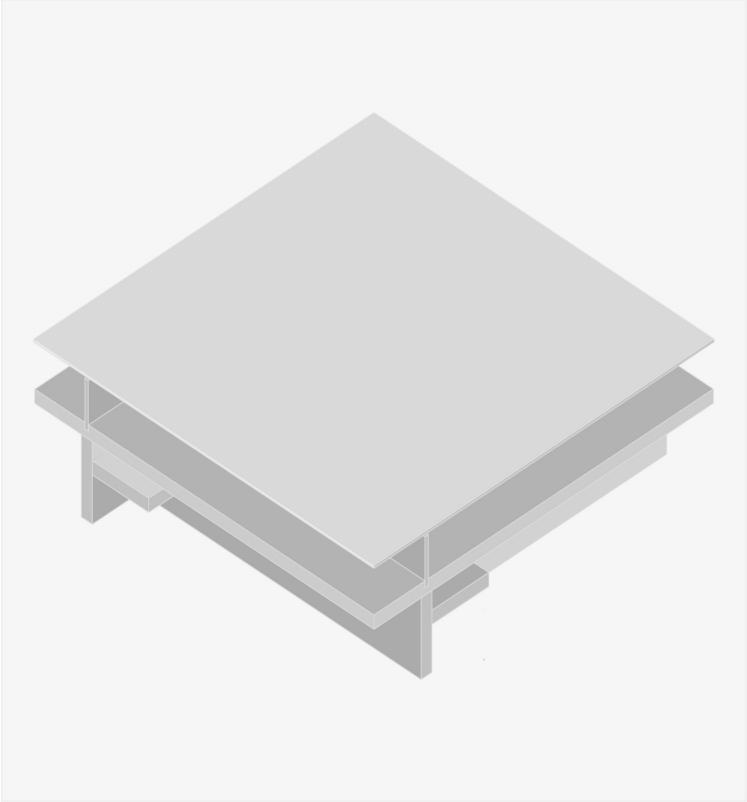

PERSPECTIVE

WARRANTY

YOUR TABLE IS COVERED BY A 2-YEAR STRUCTURAL WARRANTY, IN ADDITION TO YOUR RIGHTS UNDER THE AUSTRALIAN CONSUMER LAW. DAMAGE FROM MISUSE, ACCIDENTS OR NOT FOLLOWING THIS GUIDE ISN'T COVERED BY THE WARRANTY.

QUESTIONS

FOR CARE ADVICE, REPAIRS OR WARRANTY CLAIMS, CONTACT US AT SALES@THEHOMAGECOLLECTION.COM

GLASS TOP

WIPE WITH A MICROFIBRE CLOTH AND AMMONIA-FREE GLASS CLEANER – SPRAY THE CLOTH, NOT THE GLASS, SO NO LIQUID RUNS BENEATH THE TOP. USE COASTERS, DON'T DRAG OBJECTS ACROSS THE SURFACE, AND PROTECT THE EDGES FROM KNOCKS.

TIMBER AND VENEER

DUST WITH A SOFT, DRY CLOTH AND WIPE SPILLS STRAIGHT AWAY. AVOID POLISHES, SPRAYS AND HARSH CLEANERS, AND NEVER SAND OR SCRAPE THE WALNUT VENEER.

STADIUM MODEL

FINELY DETAILED AND DELICATE. IF IT EVER NEEDS DUSTING, USE A SOFT, DRY BRUSH – NEVER WATER, SOLVENTS OR SPRAYS.

LIGHTING

UP TO 12 HOURS OF CONTINUOUS LIGHT ON A FULL CHARGE. SWITCH OFF WHEN NOT IN USE, AND CONTACT US IF ANY LIGHTS STOP WORKING.

BATTERY AND CHARGING

CHARGE INDOORS USING ONLY THE SUPPLIED CHARGER, FROM A STANDARD AUSTRALIAN POWER POINT. KEEP IT DRY AND VENTILATED, AND UNPLUG ONCE FULLY CHARGED.

BATTERY SAFETY

IF THE BATTERY OR CHARGER GETS HOT, SWELLS, IS DAMAGED OR SMELLS UNUSUAL, STOP USING IT, UNPLUG IT AND CONTACT US. NEVER PUT BATTERIES IN HOUSEHOLD BINS – RECYCLE THEM FREE AT A B-CYCLE DROP-OFF POINT.

PLACEMENT

INDOORS ONLY, ON A FLAT, LEVEL FLOOR. KEEP IT OUT OF DIRECT SUNLIGHT AND AWAY FROM HEATERS, FIREPLACES, AIR-CON VENTS AND DAMP AREAS – SUN AND HEAT CAN FADE TIMBER AND DISCOLOUR RESIN.

MOVING YOUR TABLE

SWITCH OFF AND UNPLUG FIRST. ALWAYS LIFT WITH TWO PEOPLE – NEVER DRAG IT OR LIFT IT BY THE GLASS TOP.

PLEASE AVOID

SITTING OR STANDING ON THE TABLE, HEAVY OR SHARP LOADS ON THE GLASS, AND TAKING THE TABLE APART OR ATTEMPTING YOUR OWN ELECTRICAL REPAIRS.